


Required Flowmeter Spacing

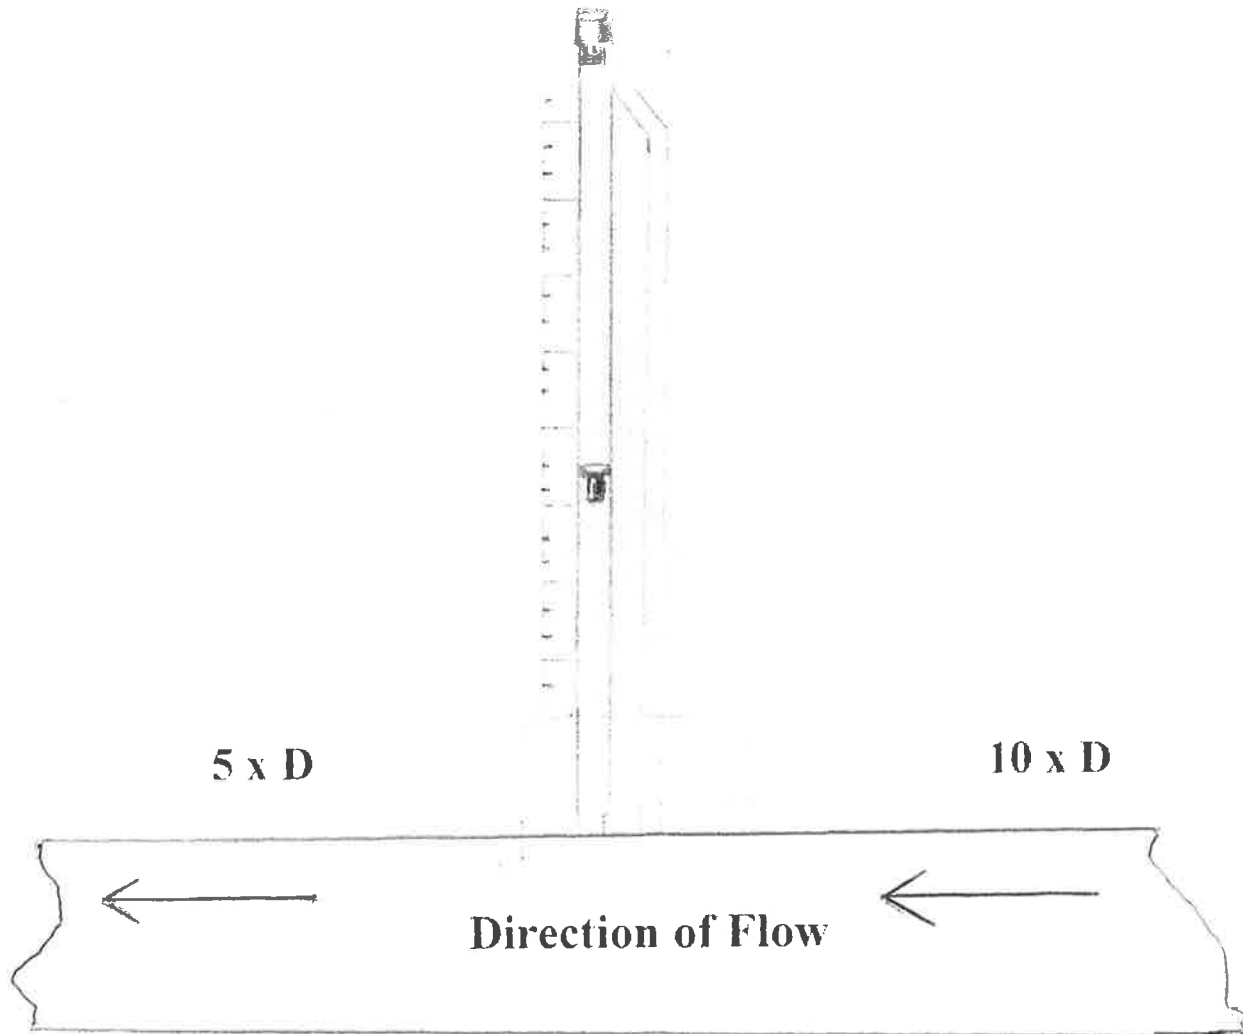

Rate of Flow Indicator

- Manufactured for use with a particular size piping.
- Reading in gallons per minute.
- Installed and located after the filter and before the heater.
- A rate of flow indicator shall be provided for each pool.
- The flow gauge should be installed on a straight, ^{level horizontal} length of pipe at a distance of at least 10 pipe diameters downstream and 5 pipe diameters upstream from any valve, elbow, or other source of turbulence. For example: If you have two inch piping your flow gauge should be installed 20 inches downstream and 10 inches upstream from any source of turbulence.